

GARAGE & GATE REMOTE PROGRAMMING

Garage & Gate
remote control



RCG12

4 Channel
434Mhz

Garage & Gate
remote control



RCG12C

4 Channel
434Mhz

Garage & Gate
remote control



RCG04B

4 Channel
434Mhz

E-series



RCG12E

4 Channel
434Mhz

If door button can't be located:

1. Take any working remote. Press the button for the function you require until the door/gate is activated and release.
2. Using a pin, press the pin hole button for 2 seconds on the working remote (Located either in the centre of the 4 buttons - or on the back).
3. Within 10 seconds take the new remote you wish to code.
4. Press the transmitter button you would like to use to control the door for two seconds.
5. Pause for two seconds then press the same button again for two seconds. This button should now be coded.
6. Wait for 15 seconds, then press the just coded transmitter button to confirm that it operates the door/gate.

continued

GARAGE & GATE REMOTE PROGRAMMING

RCG12, RCG12C, RCG04B Instructions continued

It Is Important to read through all Instructions from beginning to end, before proceeding.

1. Locate the 'Control Panel' on the garage motor.
2. Press and release the button labeled 'Learn' (see examples below). A red light should illuminate.
3. Press the desired button on the new remote control, twice.
4. Once the red light on the motor stops flashing, your new remote is now programmed.

Learn button
located below
this light cover



Learn button on
sectional doors



Learn button
located
underneath
light cover



Learn button on
roller doors



continued

GARAGE & GATE REMOTE PROGRAMMING

RCG12, RCG12C, RCG04B Instructions continued

The following procedure is for programming a RCG12/RCG12C/RCG04B remote to your gate motor:



1 Identify your gate motor.



2 To remove the cover locate the two cover screw, one located on each side, and unscrew them.



3 Lift off the cover to reveal the receiver board and digital display.



4 Press the blue 'NEXT' button once till the display shows 'Code Transmitter'.



5 Press the orange 'SET' button once, the display should show the above message and the unit will start beeping.



6 Press and release the first button on your new remote once.



7 The display will show the following message and the unit will start beeping faster.



8 Press and release the same button on your new remote again.



9 The display will now show the above message. Press the 'SET' button once.



10 The display will show the message 'Transmitter Stored!'. This means your new remote was successfully programmed. Replace cover and test at the motor to confirm.

continued

GARAGE & GATE REMOTE PROGRAMMING

RCG12, RCG12C, RCG04B Instructions continued

The following procedure is for programming a RCG12/RCG12C/RCG04B remote to your garage door:



Identify your roller door motor. If necessary remove the light cover to reveal the Control Panel.

Or



Identify your sectional door motor. On the motor locate the Control Panel.



Press and hold the 'Door Code' button on the receiver board. Continue holding through steps 3, 4 & 5.



Press and hold a transmitter button on your new remote for 2 seconds.



Release the button for 2 seconds.



Press and hold the same button again for 2 seconds.



Release the 'Door Code' button. Your new remote is now programmed.